

# CORDLESS WOVEN NATURAL SHADE



Cords and bead chains can loop around a child's neck and strangle.

- Always keep cords and bead chains out of children's reach.
- Move furniture away from cords and bead chains. Children can climb furniture to get to cords.

## IMPORTANT INFORMATION ABOUT YOUR ROMAN SHADE

This product is designed to make your shade safer for children and pets by eliminating the operating cords. However, there is a double cording system on the back of the shade. This construction is substantially different than the traditional shades that you might be accustomed to, but helps eliminate the possibility of a child or pet becoming entangled in the cords.

See the operating instructions below for additional information about the function of your shade.

**Color, materials and characteristics:** Your woven natural shade is made with materials harvested from nature. Each harvest of natural fibers is unique and will have variations in color, grain, texture, striations and warping. As a result of these inherent qualities, no two shades are identical, nor can they be. Over time, exposure to light will soften and slightly darken the color of the shade. Small cracks in bamboo slats are natural and unavoidable.

## INSTALLATION INSTRUCTIONS

### Step 1. Check Package Contents

Missing part? Call 800 264 1190

Mounting hardware kit includes the following:


	Part	Quantity
a	Mounting Bracket (includes washer & wing nut)	2 (up to 54" wide) 3 (55" To 72" wide)
b	1-1/4" Screws	4 per bracket
c	Wall Anchors (for dry wall or plaster mounting)	4 per bracket

Note: one extra screw of each noted size is included for convenience

### Step 2. Tools Required

Pencil, tape measure, screw driver, step stool, drill, drill bits.

Use a 3/32" drill bit to predrill screw holes. Use a 1/4" drill bit for wall anchors.

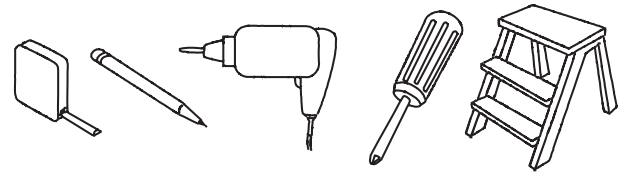

### Step 3. Bracket Location and Installation


Your blind may be installed either inside the window frame or outside the window frame.

#### For Outside Mounting:

Place a bracket on both ends of the head rail (and one in the center for larger shades).

Hold the shade level at the height desired and center it over the window opening - mark the exact location of each bracket with a pencil.

Remove the brackets from the head rail and position each bracket at the marked location and screw each bracket into the wall or window molding using the 1/4" screws.

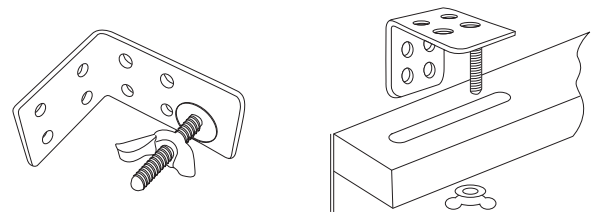

#### For Inside Mounting:

Place a bracket on both ends of the head rail (and one in the center for larger shades).

Hold the shade in place and make a pencil mark at the rear of each bracket where it contacts the inside of the window frame. Remove the brackets from the head rail and align them with the marks. Attach each bracket using the 1/4" screws.

### Step 4. Securing the Head Rail

Lift the head rail into position - place a washer and wing nut on the post of each bracket - tighten by hand.

### Step 5. How to Operate

To lower shade: hold the center of the bottom of the shade and pull downward slowly until the shade reaches the desired level.

To lift shade: place your hand (palm facing up) under the bottom of the shade and push upward slowly - if the shade material bunches-up, stop momentarily and then continue pushing upward- do this repeatedly if necessary until the shade reaches the desired height..

## CLEANING YOUR SHADES

Use a feather duster or vacuum using the soft brush attachment.

**Cordless  
Natural  
Shade**

## LIMITED LIFETIME WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

Covered: Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function)

3 years: Cords including internal cords such as those found in cordless blinds.

5 years: All fabric

Not Covered: Normal Wear and Tear.

Any product that fails due to: abuse • exposure to salt air • improper installation • accident • extraordinary use • improper operation • alterations • improper cleaning • misapplication • damage from pests/insects/pets • improper handling • misuse

Natural wood products that have: loss of color intensity • yellowing or cracking of plastic parts or foam wood product • variations in color, grain, or texture • warping of wood slats in high humidity areas

Costs associated with: product removal • transportation to and from the retailer • brand label removal • product remeasure • incidental or consequential damages • product reinstallation • shipping

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced.

To Report Shipping Damage: If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.

To Obtain Service: If you suspect this product has a manufacturing defect in materials or workmanship: 1. Locate the sales receipt 2. Call place of purchase Any unauthorized returns will not be accepted.

Warranty Remedy: THIS SHALL BE YOUR SOLE REMEDY UNDER THIS LIMITED WARRANTY.

If this product is found to have a manufacturing defect in materials or workmanship, we will (at our discretion) do one of the following: repair the product • replace the product • refund the cost of the product

Colors vary from lot to lot and may not exactly match sample swatch or previous purchases. Discontinued items or color selections will be replaced with the closest equivalent current product.

YOUR RIGHTS UNDER STATE LAW: This lifetime limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you.

No agent, representative, dealer, or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions.

**Cordless**  
**Natural**  
**Shade**