


## Clutch Shades

### IMPORTANT

In compliance with national safety regulations shades will not operate unless the cord tensioner is installed correctly! After the shade is installed, the cord tensioner must be secured to the wall.



1. Allow the tensioner to hang free and use it to position one of the two included clear plastic mounting bases.
2. Attach the mounting base to the wall or window frame with the included two long screws.
3. Position the cord tensioner and loosely attach with the short included screw (A).
4. Before tightening, pull the tensioner upwards until the small screw is aligned at or below the indicator line (B). Finish tightening the small screw.

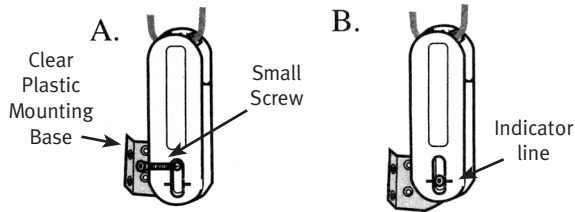

## Care and Cleaning

It is recommended that Natural Woven Shades be vacuumed periodically with a brush attachment or drapery hose attachment.

## Warning

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.
- Do not tie cords together. Make sure cords do not twist together and create a loop.
- Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.
- Do not remove looped cord from cord shroud.

Installation Instructions for

# Natural Woven Shades



Congratulations on  
the purchase of your new  
Natural Woven Shades

## "New York" Bracket Installation


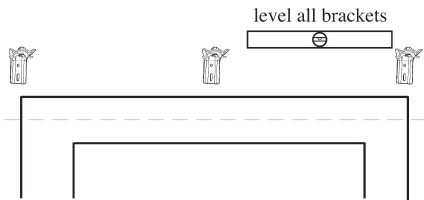


Diagram A

1. The headrail of your shade has been slotted for New York brackets. (Diagram A)

### 2. Mount the Brackets


The Extended "New York" brackets can be used either for an inside or outside mount application. Install the New York brackets in the window to line up with the slots in the headrail. Mount the brackets using the holes "C" for outside mounts or holes "D" for inside mounts. Screws provided are appropriate for wood installations, or use your own fasteners.

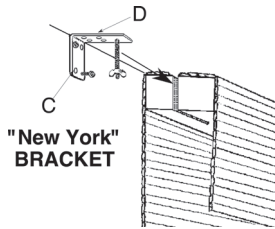

Be sure to use all the brackets provided. A level and well supported shade will ensure smooth operation,


### 3: Put Up the Shade

Remove the wing nuts from the "New York" brackets and slide the shade into position by sliding the shafts of the brackets into the slots cut into the top of the headrail.

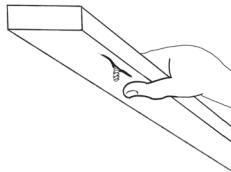

### 4: Secure the Shade


While holding up the shade, reattach the wing nuts to the "New York" brackets and tighten.

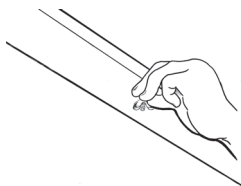

## "L" Bracket Installation

### 1: Mount the Brackets

The "L" brackets are intended for outside (frame or wall) mount only. Mount the brackets 3/4" down from where the top of the shade measurement was taken. Screws provided are appropriate for wood installations, or use your own fasteners.

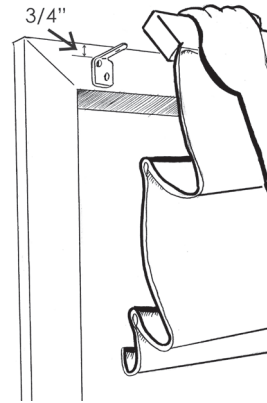


### 2: Put Up the Shade

Place the headrail on top of the mounted "L" brackets and then secure the shade to the brackets using the provided 3/4" screws.

**If your shade has a valance**, slide the headrail of the shade into the brackets, guiding the prong between the slats and weaving cords. If weave weaving cords interfere, merely shift them to the side. **DO NOT CUT WEAVING CORDS!**


### 3: Secure the Shade

Fasten shade to brackets with a screw inserted from below.

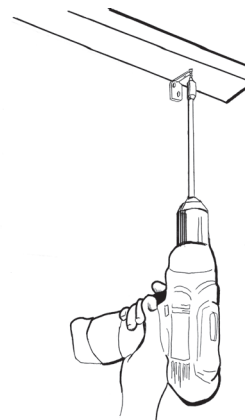

## 2" or 3" Screw Installation


2" or 3" screws are a quick and easy alternative inside mount installation method.

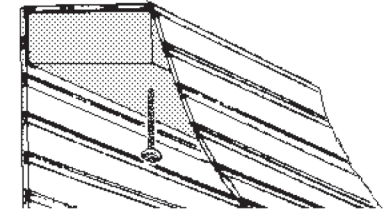

2" or 3" Screw

### 1. Insert the Mounting Screws:

With the shade down, insert the mounting screws from the bottom side of the headrail. One screw should be mounted 5" from each end of the shade. Intermediate screws should be spaced evenly in between. Use the correct number of screws.

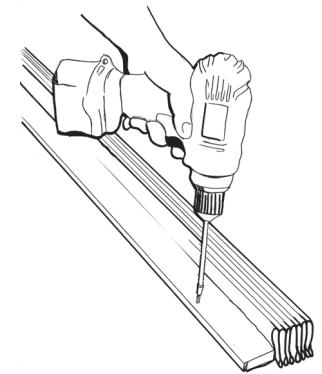

### 2. Position the Shade:

Hold the shades up and position it in the window opening. Drive the mounting screws up through the headrail into the inside of the window opening, soffit, or ceiling.

