

Installation Instructions for Honeycomb Cellular Shades

Bracket Installation:

Shades are shipped with the required number of brackets for proper installation. End brackets should be located approximately 2-1/2" from each end. Depending on the width of the shade, additional brackets may be necessary evenly spaced between the two end brackets.

Using the installation bracket as a template, measure and mark the center lines. When mounting brackets, make sure they are in line and level.

Inside Mount:

The brackets are mounted flat against the top sill surface. Place the screw through the hole in the top of the brackets. To fully recess the shade requires a flat surface with a minimum depth of 2-1/2". Shallow mounting requires 1-1/2" minimum.

Outside Mount:

The brackets are mounted with two screws through the back end of the brackets flat against the window molding or the wall above the window. The brackets require a minimum surface 1" high.

Hanging the shade:

Unwind the cord from the shade but keep the rubber band around the shade stack.

1. Hold the shade up near the brackets and insert the front edge of the bracket into the front groove of the rail.
2. Push the rail back and up until the back edge of the bracket are inserted in the back groove of the rail.

Side Mount:

1. Insert the brackets into the shade before installing. Side mount brackets slide under the two grooves on the front and back of the headrail. You must slide out the lift mechanism approximately 1/4" in order to insert the bracket. The bracket goes over the lift mechanism and then slides into the headrail grooves. Slide the lift mechanism and the bracket back into place.
2. Lower the shade.
3. Mount the brackets by placing the screw through the hole on the side of the bracket. Side mount brackets screw into the side frame of the window.

Cordlock Operation:

To lower or release shade, pull the cord inward toward the center of the shade.

To raise or lock the shade, pull the cord straight down. Pull outward toward the edge of the shade to lock the shade in place.

Cellular Shade

Installation & Maintenance Instructions

Please take a moment to review the following installation guide. Properly installed, your new shade will provide you with years of beauty.

Overview:


Recommended Tools:



Pencil Drill Screwdriver Ladder

Check the components:

Ensure that your package contains all of the contents needed for proper installation.

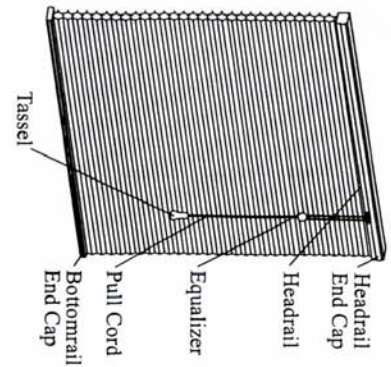

Mounting Brackets
Screws
Hold Down Cord Bracket & Screws
Cord Cleat
Cord Cleat Screws

Step 1: Position shade

Attach mounting brackets to the headrail by hooking the front lip of the headrail over the front edge of the mounting bracket downward until it snaps into position. Mounting brackets should be 2"-4" from each end cap of the headrail. For wider shades, place center support brackets evenly across the shade. Mark the location for each bracket with a pencil and remove the brackets from the headrail.


Step 2: Install mounting brackets

For inside mounts:

Brackets should be mounted to the top of the window jamb using the top holes in the bracket. Make sure that brackets are aligned.

For outside mounts:

Brackets should be mounted to the outside of the window frame using the back holes of the bracket. Make sure brackets are level.

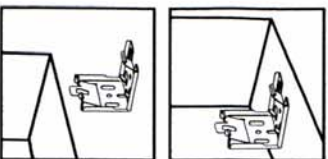


Drywall Mounting: If mounting onto drywall surface, plastic wall anchors are needed (not included).

After drilling holes, insert plastic wall anchors and secure bracket with screws.

Step 3: Hang your shade


Hang the cellular shade by hooking the front lip of the headrail over the front edge of each of the aligned mounting brackets. Push the headrail upwards and back until it snaps into position with the mounting brackets.

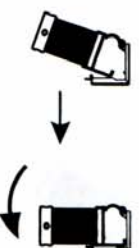

ATTENTION: Due to the nature of the packaging and the fabric, the cellular shade may take time to drop to its full length after initial installation. Fully open and leave your cellular shade extended for approximately 2-3 days to allow the fabric to relax.


Step 4: Install the cord cleat to secure cords out of reach of children

Secure cord cleat at a desired height with the screws provided, several inches from the side of the shade.

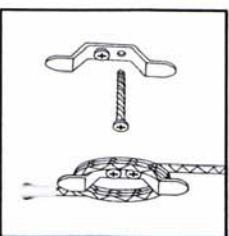

Step 5: Installing optional hold-down bracket

Mount hold-down brackets on both sides of the shade so that snap bracket pin ends align with the hole in the bottomrail end caps.

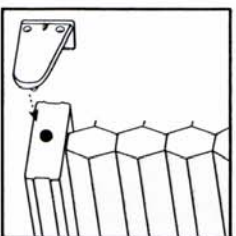

Operating your cellular shade:

To lower shade, pull the cord down and toward the center of the shade to unlock cord, then slowly release the cord until the shade is to the desired height. Move the cord away from the center of the shade and let go to lock the cord. To raise the shade, pull cord straight down until the shade is how you want it. Move the cord past the side of shade and let go to lock the cord.

Removing your cellular shade:

To remove your cellular shade, press the tab at the bottom of each bracket with a screwdriver and rotate the shade forward releasing them out of each bracket.

Cleaning instructions:

Routine cleaning will maintain the beauty of your shades. To care for your shades, simply vacuum using a clean brush or dust head attachment or dust using a soft, clean cloth.