### Notes:


- Save packaging until shade is installed and working to your satisfaction. Please be careful not to throw away the small clear plastic handles.
- Shades are shipped with the appropriate number of brackets and hardware
- For drywall, metal, or special cases, you may need wall anchors (not provided).
- Due to compression in shipping, the shade may initially hang slightly short. After installation, stretch the shade by running your hands over the fabric from top to buttom; the shade will stretch to desired length.

# Step 1: Mount the brackets.

- a. Brackets can be used for **Inside Mount** (inside the window frame, secured upwards into the frame) or **Outside Mount** (secured into the wall above the window frame). Notice the label on the shade to see which you've ordered.
- b. For an **Inside Mount**, place each bracket ¼" from the front edge of your window frame. Mark the placement using a pencil, using only the single hole in the top of the bracket. Secure the brackets using the screws provided.



c. For an **Outside Mount**, place each bracket in the desired location on the wall. Mark the placement using a pencil, using the 2 holes in the side of the bracket. Secure the brackets using the screws provided.

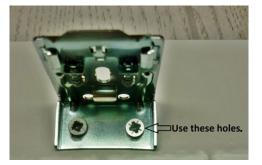


**IMPORTANT**: Make sure the brackets are all in line and level.

## Number of brackets included with your shade:

Width	# of Brackets
0 - 38"	2
38" - 59"	3
59" +	4

# Step 2: Install the shade.

- a. Hold the shade up near the brackets and insert the front dip of the bracket into the front groove of the rail.
- b. Make sure the shade is centered in the window opening.
- c. Push the rail back and up until the back clips of the bracket are inserted in the back groove of the rail. You will feel a snap.



To remove the shade, reverse the procedure.

# **Cleaning and Care:**

Regular dusting with a feather duster or vacuum cleaner brush is recommended. You can use a damp sponge and mild detergent for stains.