



1" Premium Cordless Aluminum Blind Installation and User Guide

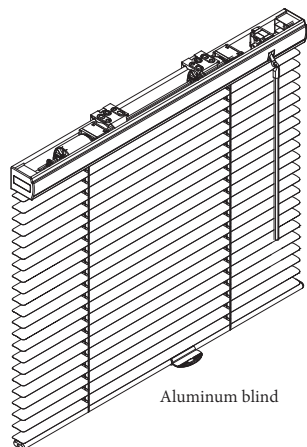


Aluminum blind

1. Identify your aluminum blind and parts (your parts may vary, depending on the custom request & size of the blind you are purchasing.)

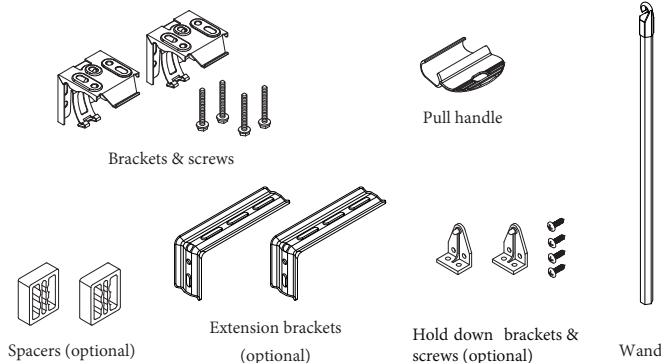

2. Tools you may need (not included)

- Drill with bits
- Metal tape measure
- Screwdriver
- Pen

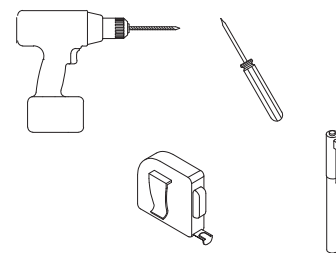



3. Install the brackets

- Mark the bracket locations, making sure the brackets will not interfere with any mechanism or other internal headrail parts. The outermost brackets should be installed close to each headrail end cap. If you have more than 2 hidden brackets, install all remaining brackets towards the center of the headrail evenly.
- Install the brackets using screws (included) and tighten them completely.
- Make sure all brackets are aligned and level with each other.


- Install the blind with extension brackets (optional)

- Install the extension bracket with at least 2 screws.
- Attach the hidden brackets to the extension brackets with the screws.



Optional - Add a spacer behind the bracket if needed.

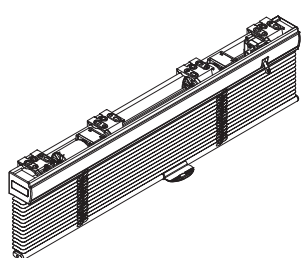


Inside Mount

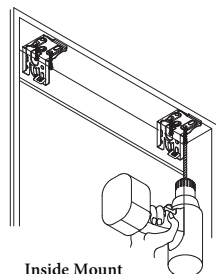

Outside Mount

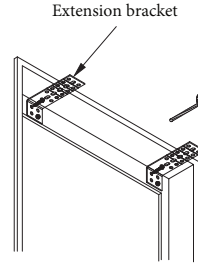
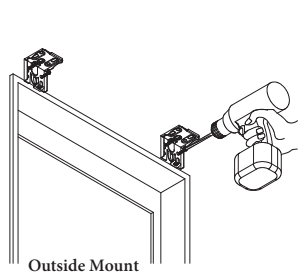


Extension bracket

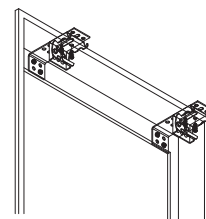



4. Attach the blind

- Position the headrail with the front lip resting on the top hooks of all the brackets.
- Push the bottom of headrail firmly upward and toward the window until the groove at the bottom of the headrail snaps into place.

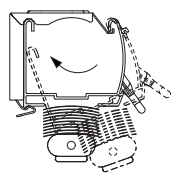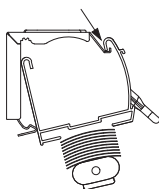


5A. How to remove the blind from the brackets

- Unlock the hidden brackets with a flat head screwdriver.

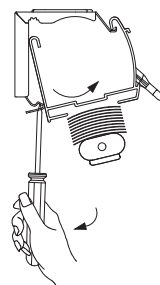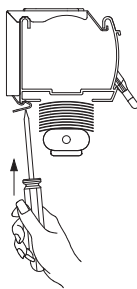




6. Attach the tilt wand

- Attach the tilt wand onto the wand hook located on the headrail.

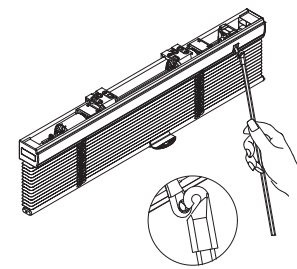

7. Use hold down brackets to keep the bottom rail in a fixed position (optional)

- A hold down bracket secures a blind's bottom rail to the bottom of a door or window to prevent it from moving. These are usually only needed when installing blinds on doors and in RVs to help to prevent damage to your blinds, doors, and windows.
- The hold down bracket shall be installed to the wall when it is an outside mount or to the jamb of the window frame when it is an inside mount. Do not install hold down brackets on the sill of the window frame.
- Fully lower the blind and insert the hold down bracket pin into the hole at the side of the bottom rail end-cap, one hold down bracket per each end cap, then mark the location of each hold down bracket.
- Each hold down bracket should be secured with two screws.
- Place the hold down bracket pins into the end caps of the bottom rail to secure the bottom rail in place.

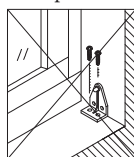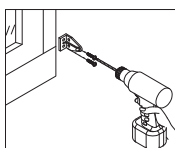

8. Care and Clean

- Wipe the blind periodically with a soft dust cloth or dusting mitt, or vacuum with a soft brush attachment.
- You may clean the blinds using a non-scratched sponge or dampened soft cloth with a mild nonabrasive detergent. Never use hot water, solvents, or harsh or abrasive cleansers to clean the blinds.
- Note: The warranty for your blinds does not cover damage caused by improper cleaning.

