

Quick-Fit No-Tools Mounting System



Installation Instructions

152768B
6/2/2021

GETTING STARTED

The Quick-Fit No-Tools Mounting System will come with the shade installation brackets already attached.

No drilling is necessary to install this shade.

A Flat head screwdriver is needed to remove the Quick-Fit No-Tools Mounting System.

Important: Some **Roller Shade** styles are shipped with the shade mounted on the installations brackets on the quick-fit no-tools bar. Follow the instructions in the installation booklet that came with your shade to remove the shade from the mounting brackets prior to installing the Quick-Fit No-Tools Mounting System.



STEP 1: ROLLER SHADE VALANCE BRACKET INSTALLATION (OPTIONAL)

Cut 2 pieces of double sided adhesive for each valance bracket the width of bracket.



Remove release liner from one side of the double sided adhesive and apply to the mounting system rail as shown.

The double sided adhesive for the end brackets should be approximately 3" from the ends. Space any additional adhesive evenly between the ends.

Remove the remaining release liner. Align the back of the brackets with the back edge of the rib as shown. Press down firmly to attach.

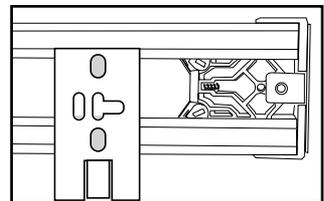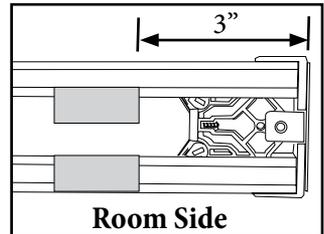

STEP 2: QUICK-FIT NO-TOOLS MOUNTING SYSTEM INSTALLATION

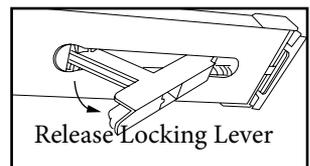


APPLY DOUBLE SIDED ADHESIVE (SMOOTH SURFACES)



If mounting on a smooth surface such as painted aluminum or tile you must apply the double sided adhesive (included) to the end caps to keep the mounting system secure. Remove release liner from one side of the adhesive and apply to both end caps and press firmly to adhere.



MOUNTING SYSTEM PLACEMENT

Place the Quick-Fit No-Tools Mounting System in the window opening so that the end with the lever is up tight against the window casing.

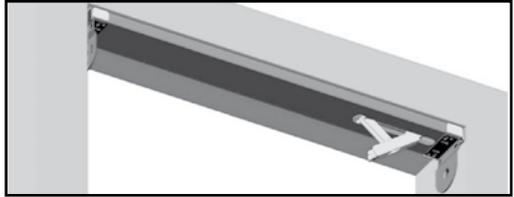

WIDTH ADJUSTMENT

If there is a gap at the non-lever end of the rail, simply slide the end cap until it touches the window casing. See END CAP ADJUSTMENT on page 3 if you accidentally pull the end cap out too far.

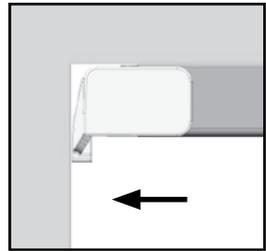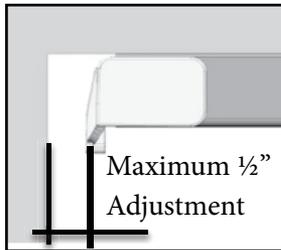

SMOOTH SURFACES


Remove the release liners from the double sided adhesive on the endcaps.
Replace mounting system.

LOCK IN PLACE

Make sure that the mounting system is level.

Press up on the lever to lock the mounting system in place.


See page 4 for proper removal if necessary.

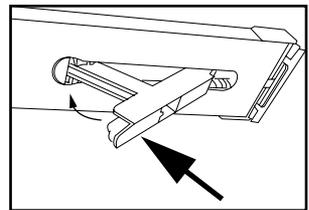

STEP 3: SHADE INSTALLATION


Follow the instruction in the installation booklet that came with your shade to install the shade into the mounting brackets on the Quick-Fit No-Tools Mounting System.

For **Skyline Roller** shades the installation bracket will look slightly different than the bracket pictured in the installation booklet. Place the idler pin in the front hole. The hooks on the motor or clutch end should go in the front two rectangles.

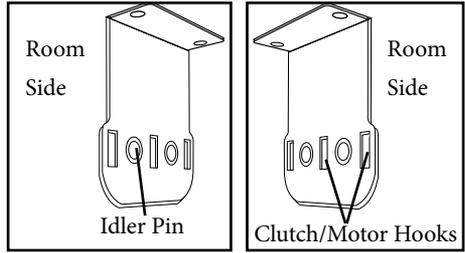


STEP 4: VALANCE INSTALLATION (OPTIONAL FOR ROLLER SHADES)

Align the valance with the valance brackets. Gently push at each bracket location until the valance is fully seated.

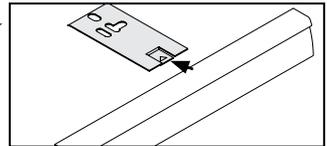

QUICK-FIT NO-TOOLS MOUNTING SYSTEM REMOVAL

1. Remove the shade from the Quick-Fit No-Tools mounting system following the instructions in the installation booklet that came with your shade.
2. Hold the mounting system securely with one hand. Use a flat head screwdriver to pry open the locking lever.

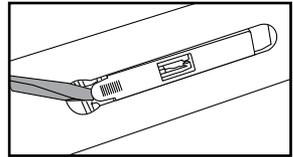

CAUTION: LEVER WILL RELEASE ABRUPTLY - KEEP HAND CLEAR OF LEVER!

MOVEABLE END CAP ADJUSTMENT

The moveable end cap is designed to only pull out with out tools. If for some reason the end cap needs to be compressed you will need a small flat head screw driver.

1. Use the screw driver to turn the locking tab release screws as shown.
2. Push the End Cap in.
3. **Return the locking tabs to their original position.**

